
Installation/Care/Use Manual

Refrigerated Fountains with FLEXI-GUARD®

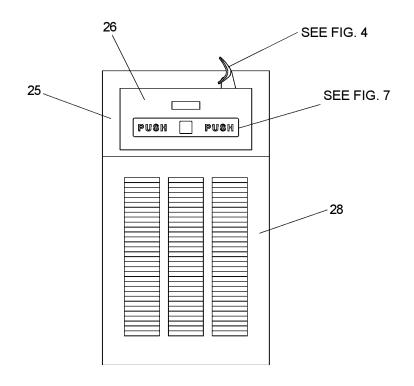

Installer


To assure you install this model easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL AND OTHER APPLICABLE CODES. After installation, leave these instructions inside the fountain for future reference.

IMPORTANT

ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON


IMPORTANT! INSTALLER PLEASE NOTE.

THE GROUNDING OF ELECTRICAL EQUIPMENT SUCH AS TELEPHONE, COMPUTERS, ETC. TO WATER LINES IS A COMMON PROCEDURE. THIS GROUNDING MAY BE IN THE BUILDING OR MAY OCCUR AWAY FROM THE BUILDING. THIS GROUNDING CAN CAUSE ELECTRICAL FEEDBACK INTO A FOUNTAIN, CREATING AN ELECTROLYSIS WHICH CAUSES A METALLIC TASTE OR AN INCREASE IN THE METAL CONTENT OF THE WATER. THIS CONDITION IS AVOIDABLE BY USING THE PROPER MATERIALS AS INDICATED. ANY DRAIN FITTINGS PROVIDED BY THE INSTALLER SHOULD BE MADE OF PLASTIC TO ELECTRICALLY ISOLATE THE FOUNTAIN FROM THE BUILDING PLUMBING SYSTEM.

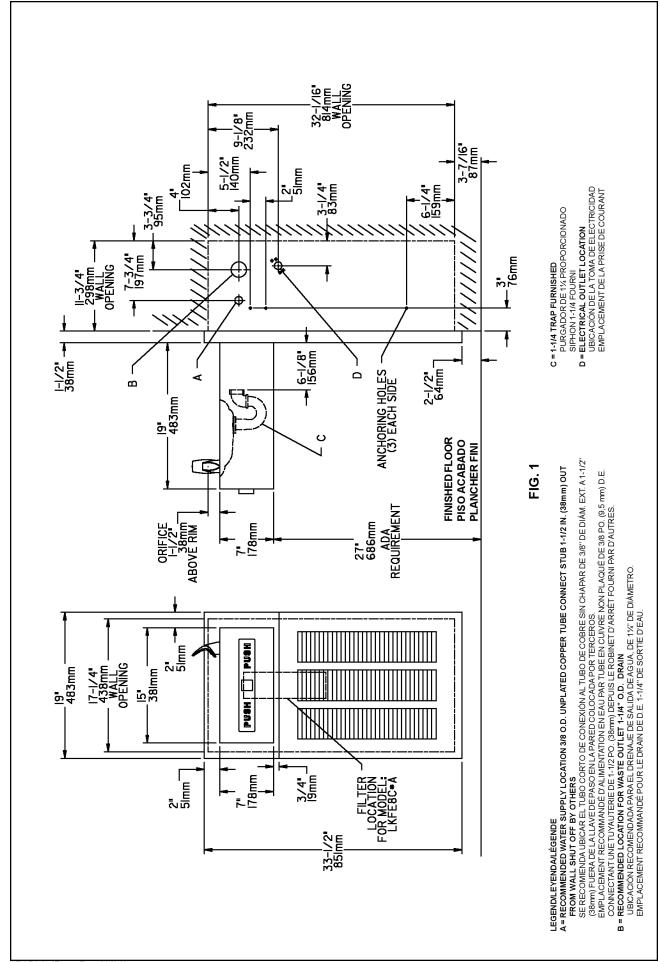

INSTALLATION INSTRUCTIONS


- 1. Fasten mounting box into wall cutout using (6) screws or bolts (provided by others) through holes or knockouts provided on each side of the mounting box. (See Fig. 1)
- Mount back panel using (2) screws supplied.
- 3. Hang fountain body and back panel using (2) screws and nuts provided.
- 4. Secure fountain body and back panel to wall box using (4) screws and nuts provided.
- 5. Place refrigeration package inside mounting box and connect water outlet tube on refrigeration package to water in tube on regulator holder (Item 5) with tubing and fitting provided. (See Fig 2 or 3)
- Water inlet is 3/8" O.D. and waste is 1-1/4" O.D. slip trap. (Both provided)
- 7. Connecting lines to be unplated copper and thoroughly flushed to remove all foreign matter before connecting to refrigeration package. The furnished strainer (Item 23) should be added to the supply line.
- 8. Connect refrigeration package to supply line with a shut off valve and install a 3/8" unplated copper water line between the valve and the cooler. Remove burrs from outside of water line. Insert water line straight into fittings until they reach a positive stop, approximately 3/4" (19mm). (See Fig. 6 and 7) DO NOT SOLDER TUBES INSERTED INTO THE STRAINER AS DAMAGE TO THE O-RINGS MAY RESULT.
- 9. Electrical: Insure power supply is identical in voltage, hertz, and phase to that specified on the refrigeration package serial plate. Never wire compressor directly to the power supply.
- 10. Turn water supply on and check thoroughly for leaks.
- 11. Release air from tank by depressing push bar; a steady stream of water assures all air is removed.
- 12. Re-check for leaks.
- 13. Stream height is factory set at 35 PSI. If supply pressure varies greatly from this, turn adjustment screw on regulator (Item 7). Clockwise adjustment will raise the stream height and counter-clockwise adjustment will lower stream height. For best adjustment, stream should hit basin approximately 6-1/2" from the bubbler.
- 14. Rotate fan blade on refrigeration package to insure proper clearance and free fan action.
- 15. Connect power supply.
- 16. Replace access panel and install grill as shown.

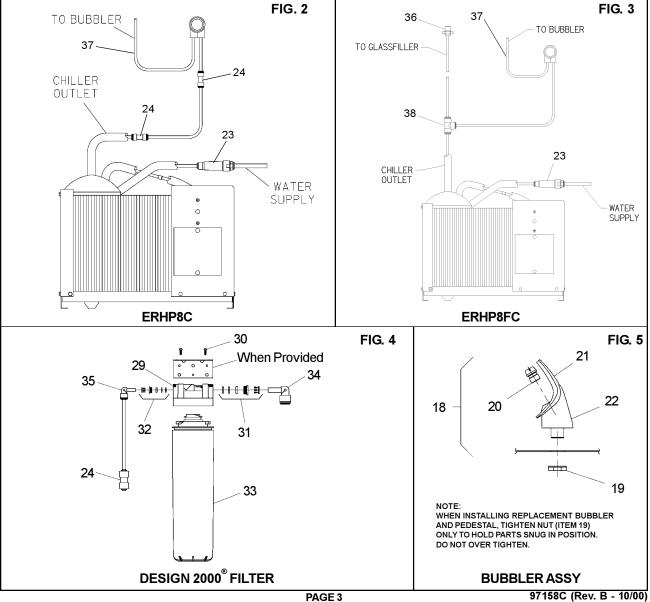

ERHP8C*A ERHP8FC*A LKFE8C*A LKFE8FC*A

		ERHP8C*A ERHP8
PARTS LIST		
ITEM NO.	PARTNO.	DESCRIPTION
1	21696C	BRACKET-PUSH BAR MTG.
2	21708C	PUSH BAR ASSY
	27600C	PUSH BAR ASSY (BRONZETONE)
3	75532C	SCREW - #10 X .50 PHTH TYPE AB
4	21695C	LEVER - PUSH
5 6	50986C	HOLDER - REGULATOR
7	40045C 61314C	HEX NUT REGULATOR
8	15005C	RETAINING NUT
9	75555C	CLIP
10	50198C	BUSHING - NYLON
11	70379C	ROD - PIVOT
12	70278C	ROD - PIVOT
13	70378C	ROD - PUSH
14	21705C	CLIP - PUSH ROD
15	70002C	SCREW - #10 X .50 HHSM
16	40206000	RETAINER
17	70023C	SET SCREW
18	51349C	BUBBLER ASSY
	56044C	BUBBLER ASSY (BRONZETONE)
19	70012C	LOCKNUT
20	40322C	ORIFICE ASSY
	45383C	ORIFICE ASSY (BRONZETONE)
21	50934C	HOUSING ASSEMBLY
22	50168C	PEDESTAL (PRONZETONE)
23	56042C 55996C	PEDESTAL (BRONZETONE) STRAINER
23	70683C	UNION-1/4 X 1/4
25	55000777	BACK PANEL ASSY
20	27613C	BACK PANEL ASSY (BRONZETONE)
26	55001083	FTN BODY ASSY
	27606C	FTN BODY ASSY (BRONZETONE)
	28206C	FTN BODY ASSY (GLASSFILLER)
27	LK464	DRAIN `
	LK464BT	DRAIN (BRONZETONE)
28	EG23	GRILL
	EG23BT	GRILL (BRONZETONE)
29	51294C	FILTER HEAD ASSY
30	70792C	SCREW - #8-18 X .75" PH
31	70823C	FITTING-SUPERSEAL 3/8" (10mm)
32	70822C	FITTING-SUPERSEAL 1/4" (6mm)
33 34	51299C 70818C	FILTER ASSY ELBOW-3/8" (10mm)
34 35	70818C 70817C	ELBOW-3/8 (10mm) ELBOW-1/4" (6mm)
36	15009C	NIPPLE ASSY
37	56092C	POLY-TUBING 48" (CUT TO LENGTH)
38	70682C	TEE - 1/4

OPERATION OF QUICK CONNECT FITTINGS

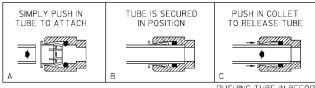

PUSHING TUBE IN BEFORE PULLING IT OUT HELPS TO RELEASE TUBE

FIG. 6

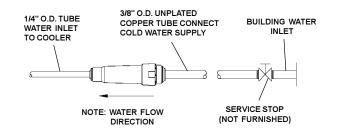


FIG. 7

TROUBLE SHOOTING AND MAINTENANCE

- Orifice Assy: Minerals deposits on orifice can cause water flow to spurt or not regulate. Mineral deposits may be removed from the orifice with a small round file not over 1/8" diameter or a small diameter wire.
 - CAUTION: Do not file or cut orifice materials.
- 2. **Stream Regulator:** If orifice is free of material deposits regulate water flow according to instructions on page 3.
- 3. CAUTION: Cleaning of Bronzetone Models requires special care. Outer surfaces must be cleaned with a mild detergent or mixture of vinegar and water only, rinsed and wiped dry. Abrasive and acidic cleaners may eventually damage the Bronzetone finish.

